

## Sunlux XL-39xx Ayarları



Start



W030002

Scanning Mode: Continuous Mode



W616021

Message Terminator: CRLF



Exit