
PP8X Printer Driver Installation Instruction



Pinnacle Technology Corp.

CONTENTS

1	BT Device Installation	1
2	Printer Driver Installation	6
3	How to Know the Connecting Port.....	10
4	How to Configure Port.....	12
5	Parameter Setting	17
6	Download Logo	18

1 BT Device Installation

This method is suitable for windows XP/VISTA OS.


 
Notes: If there is a need to connect the PP8X printer to the PC, users may buy an Aclas BT dongle as the following picture shows.

The advantage of the Aclas BT dongle is: it could quickly find the surrounding BT devices that will be matched with rather than costing a long time to search the device.



If you will connect the PP8X printer to the PC, insert this dongle into the USB port of PC. The lower right corner of screen will show the icon . At the same time, the icon will appear at the control panel as the following picture:


Notes: If the blue tooth icon doesn't appear in either of the above two places, it's possible that the applied USB port is defective or the operation system of the PC does not have the configuration of blue tooth.




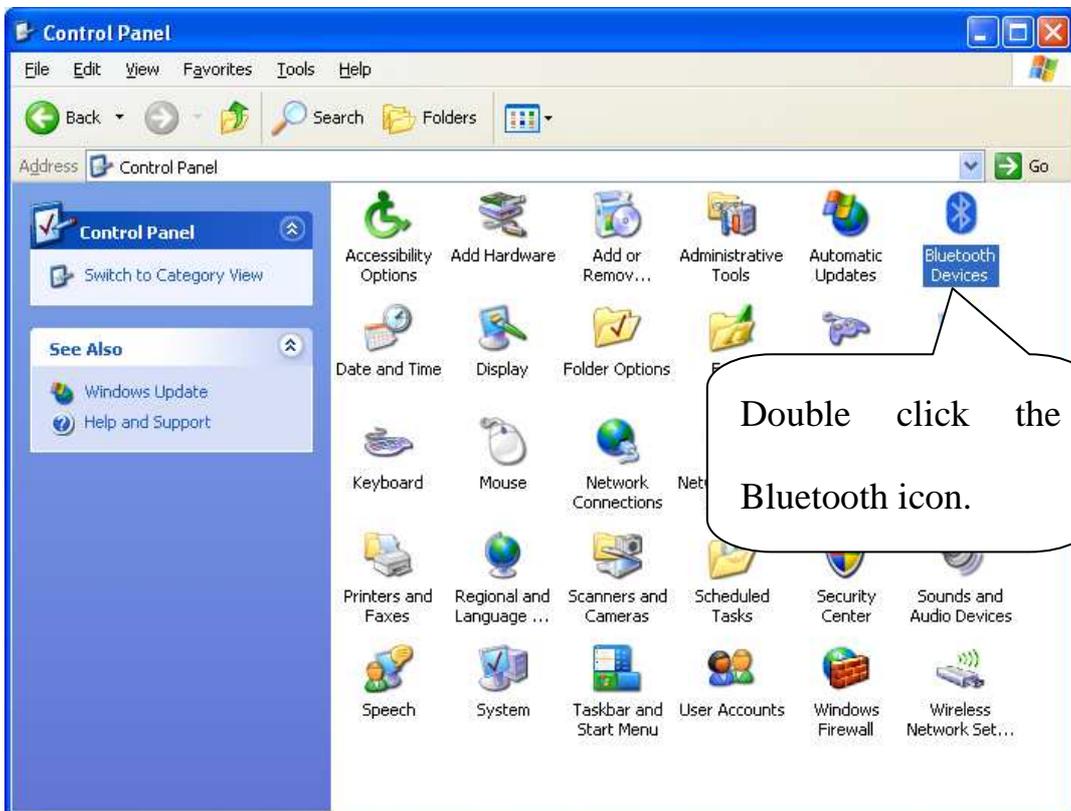





Then press 'Switch key' and 'Paper feed key' at the same time to make the blue tooth device in searching mode while the blue tooth light (green) on the printer is glittering quickly.



    Double click the blue tooth icon , and then you'll see the following interface:


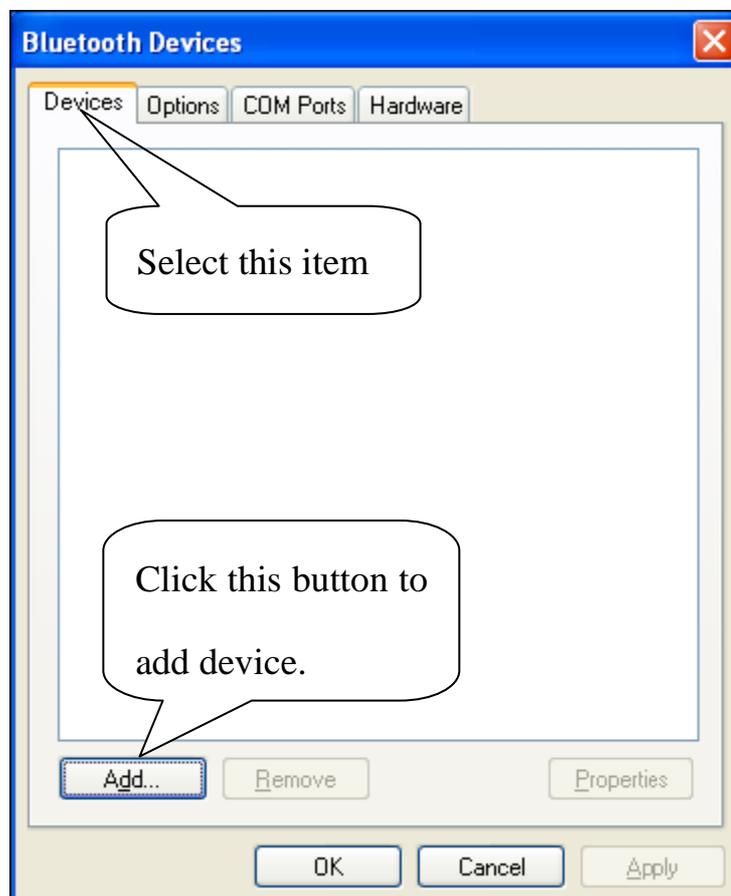


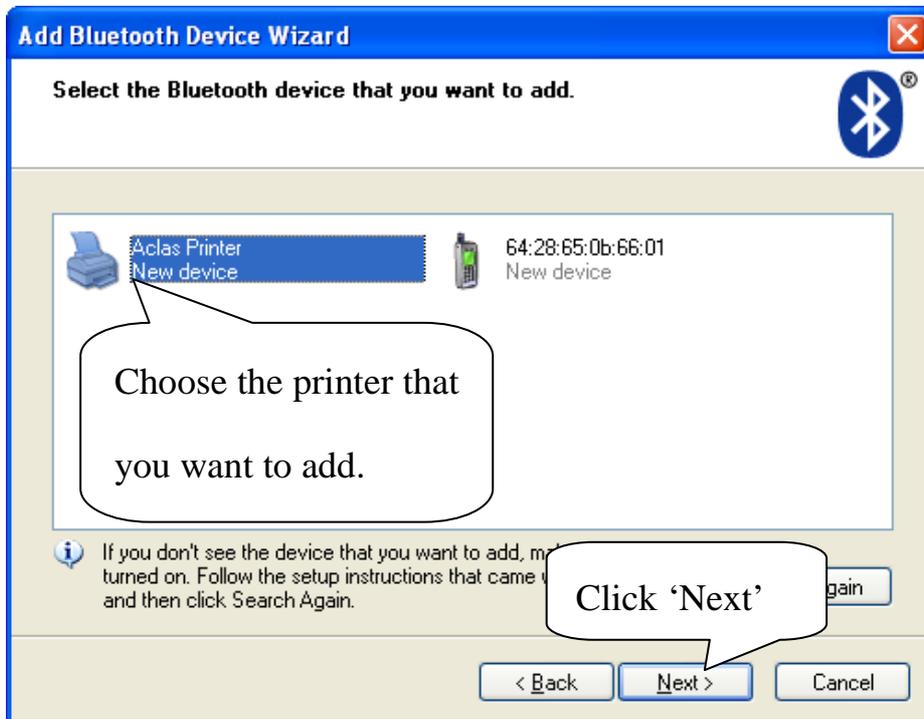

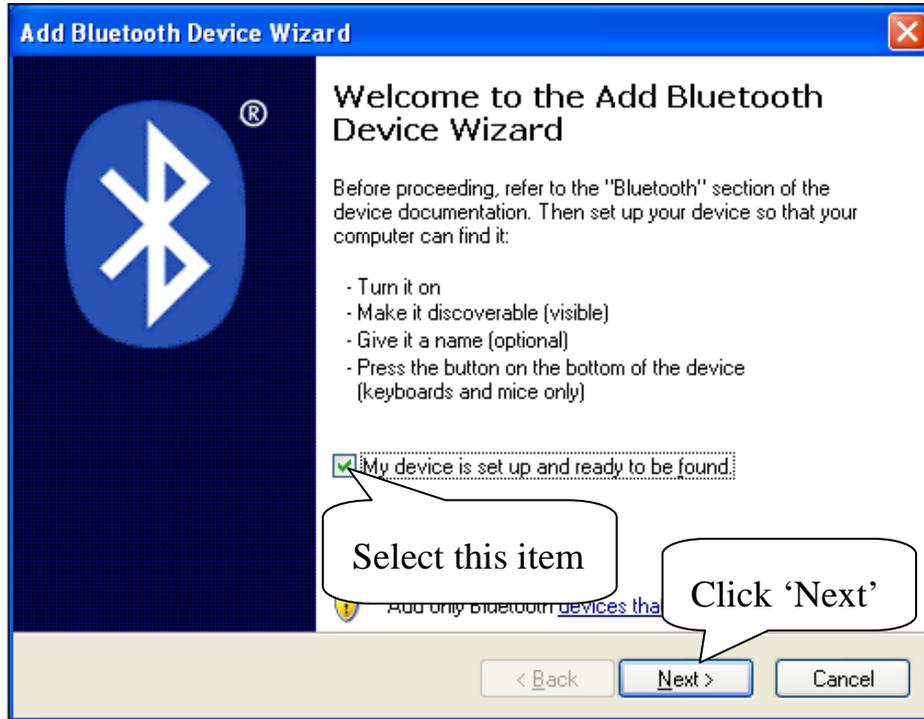




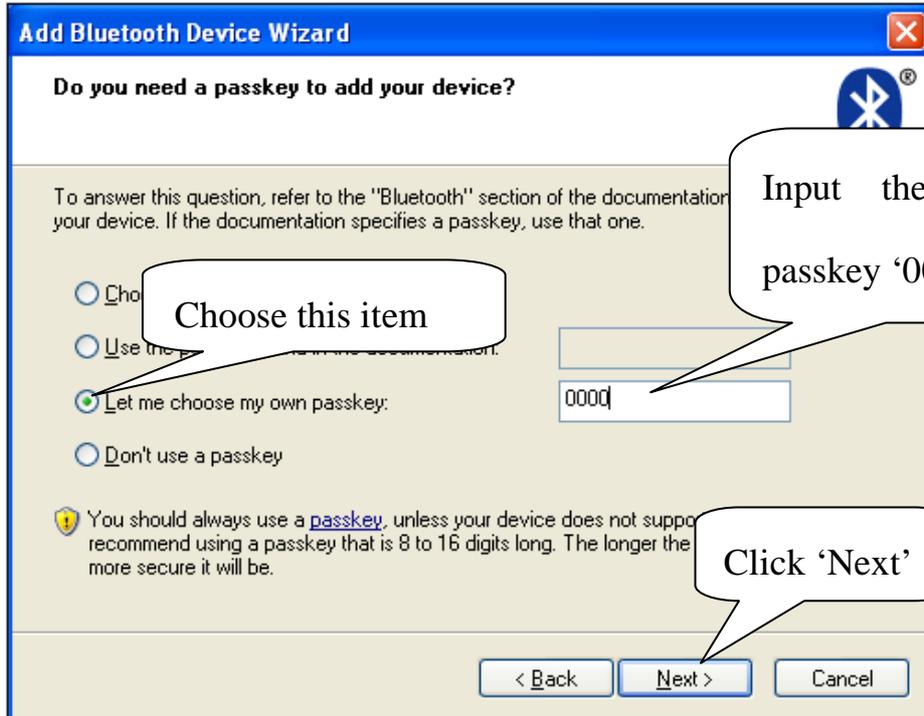



2 Printer Driver Installation

     Connect the PP8X to PC, and run the attached CD-disk. Please double click the file 'Aclas printer.exe' to install the printer driver.

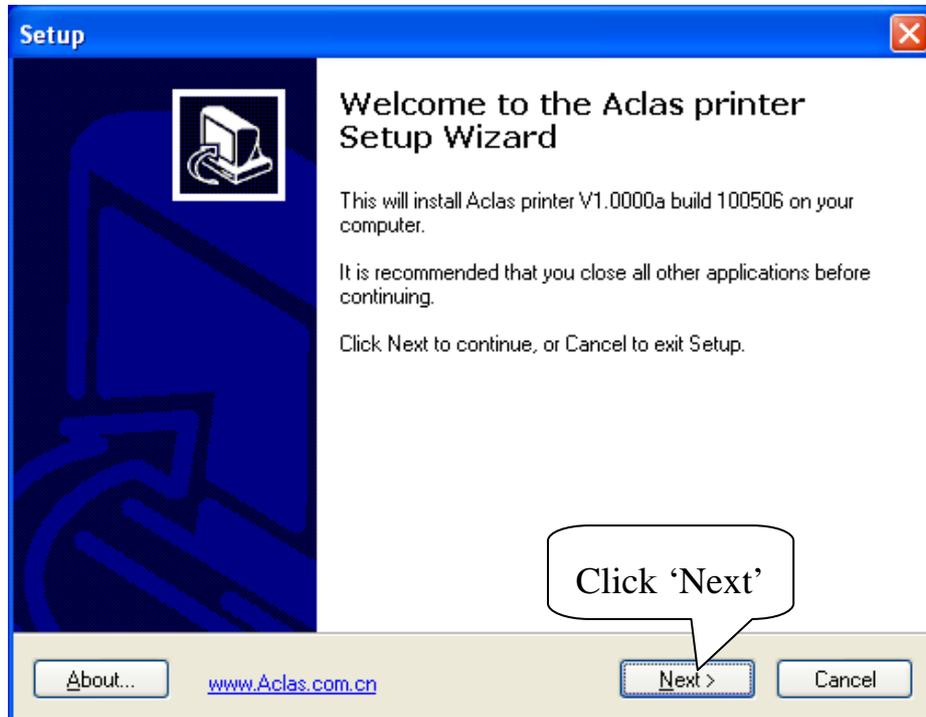

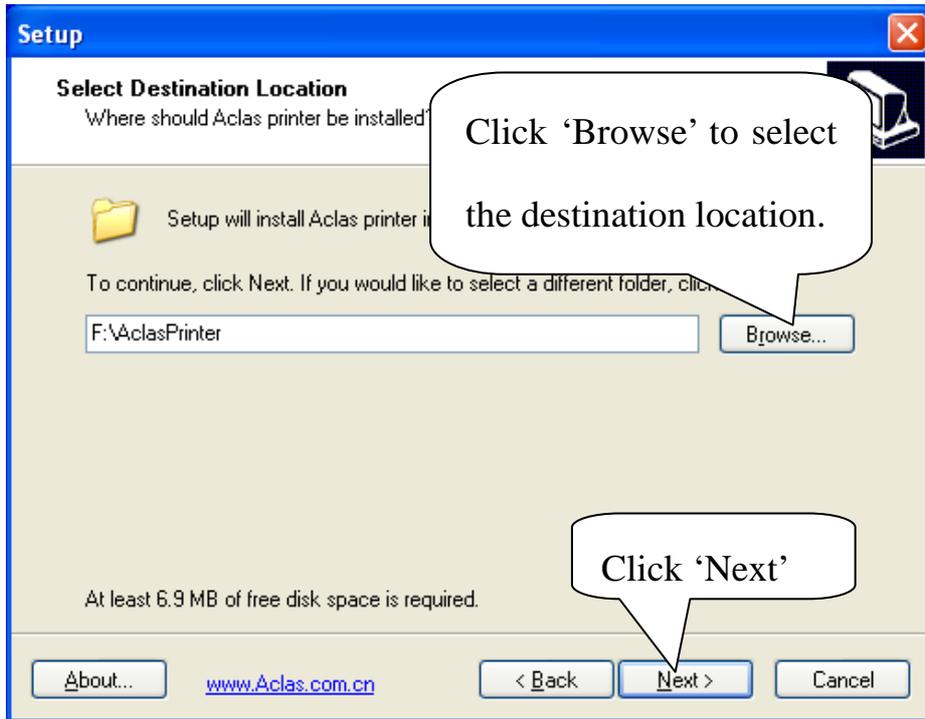

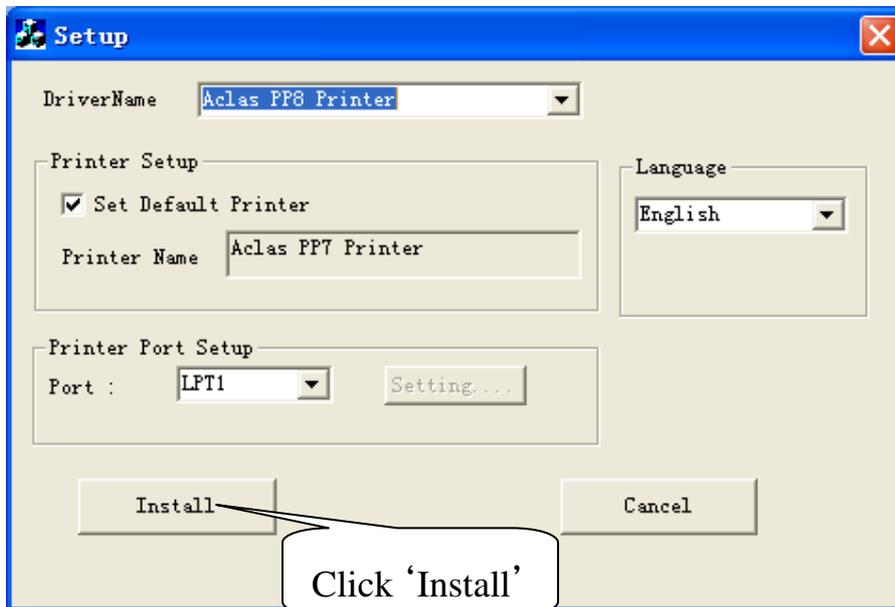

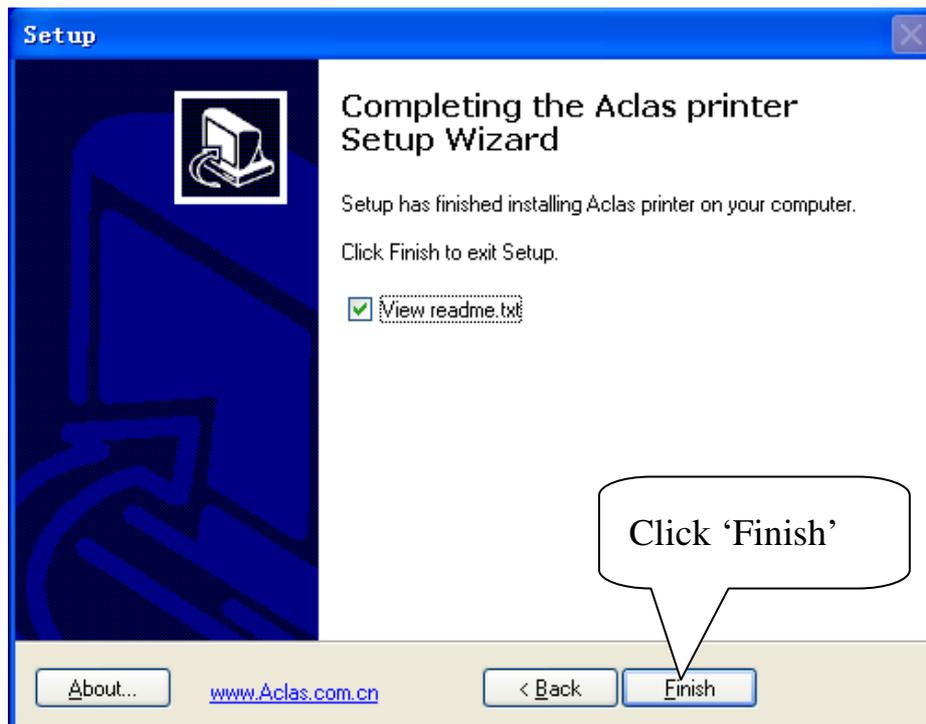



Finally, click 'Finish' to finish printer driver installation.

3 How to Know the Connecting Port

After installing the driver, you can follow the steps below to know which port is connected.

 Double click the icon  .




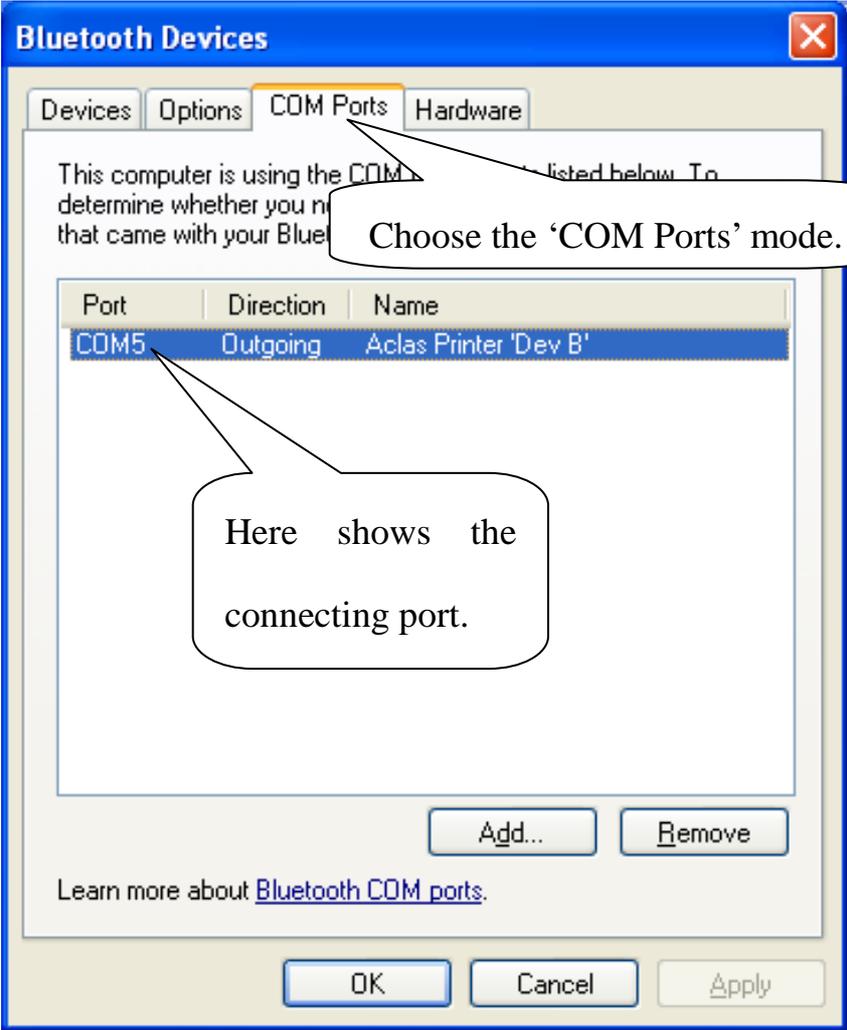


4 How to Configure Port


It is necessary to configure the port. Enter 'properties' interface first to configure port.


- If your PC is installed with Windows XP system, please follow the below steps to enter 'properties' interface

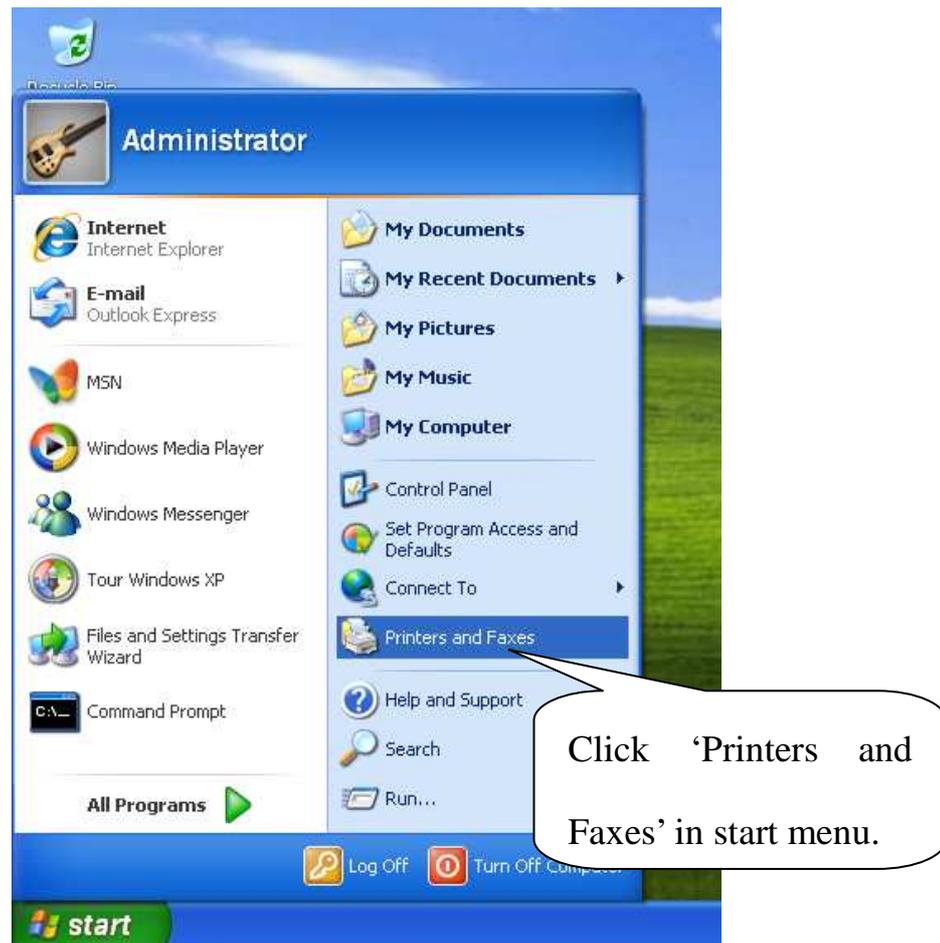

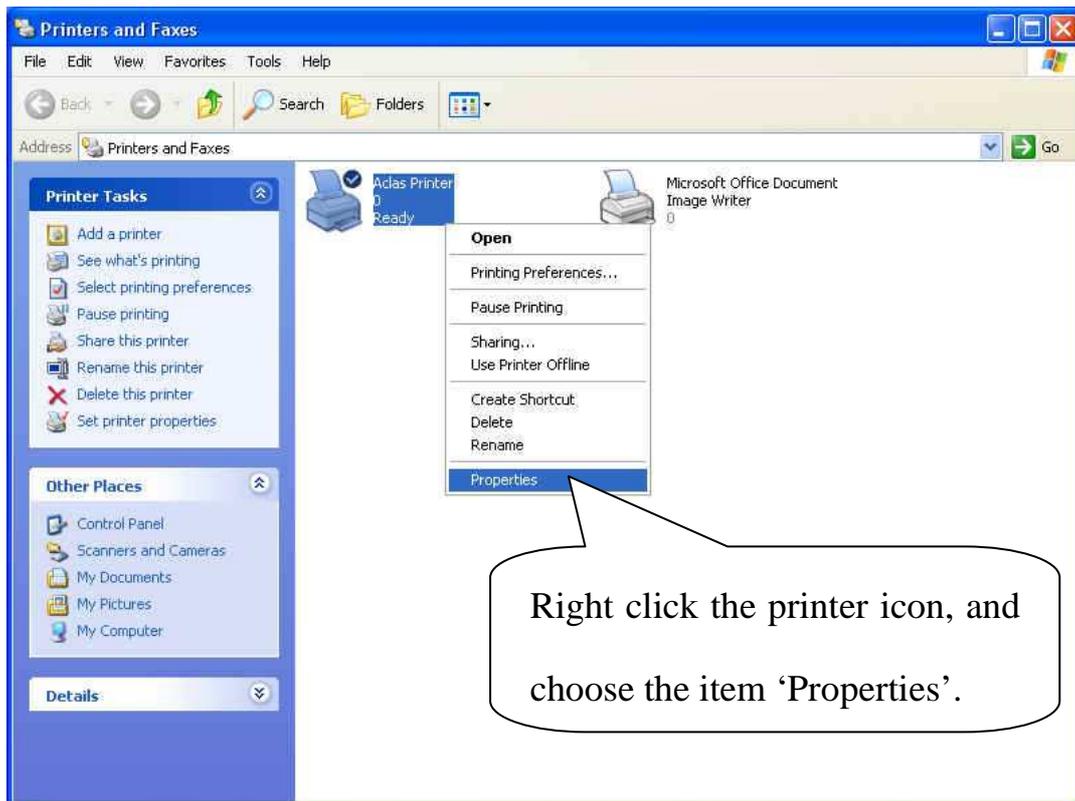


- If your PC is installed with Vista system, please follow the below steps to enter 'properties' interface.

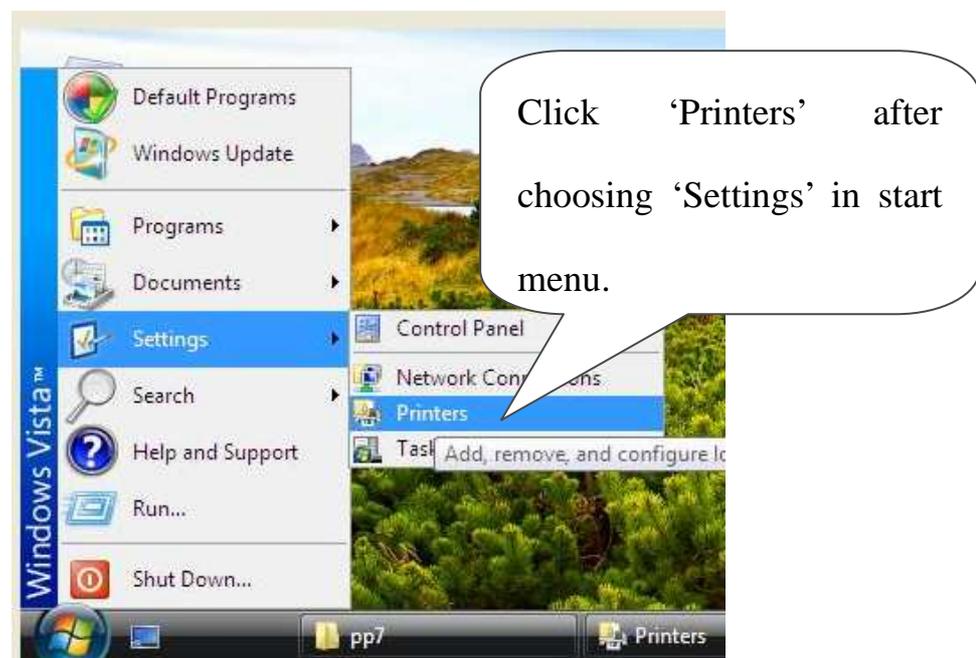


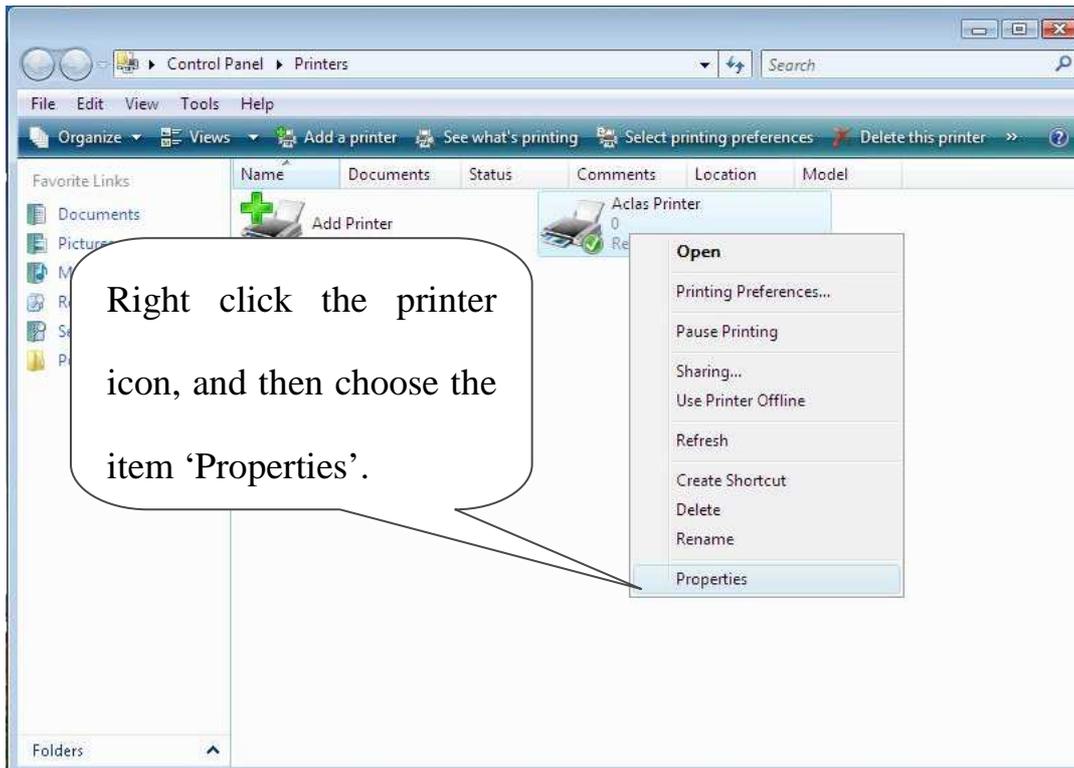


Note: If you are a common user, please choose 'properties' through the item 'run as administrator' as the window below:


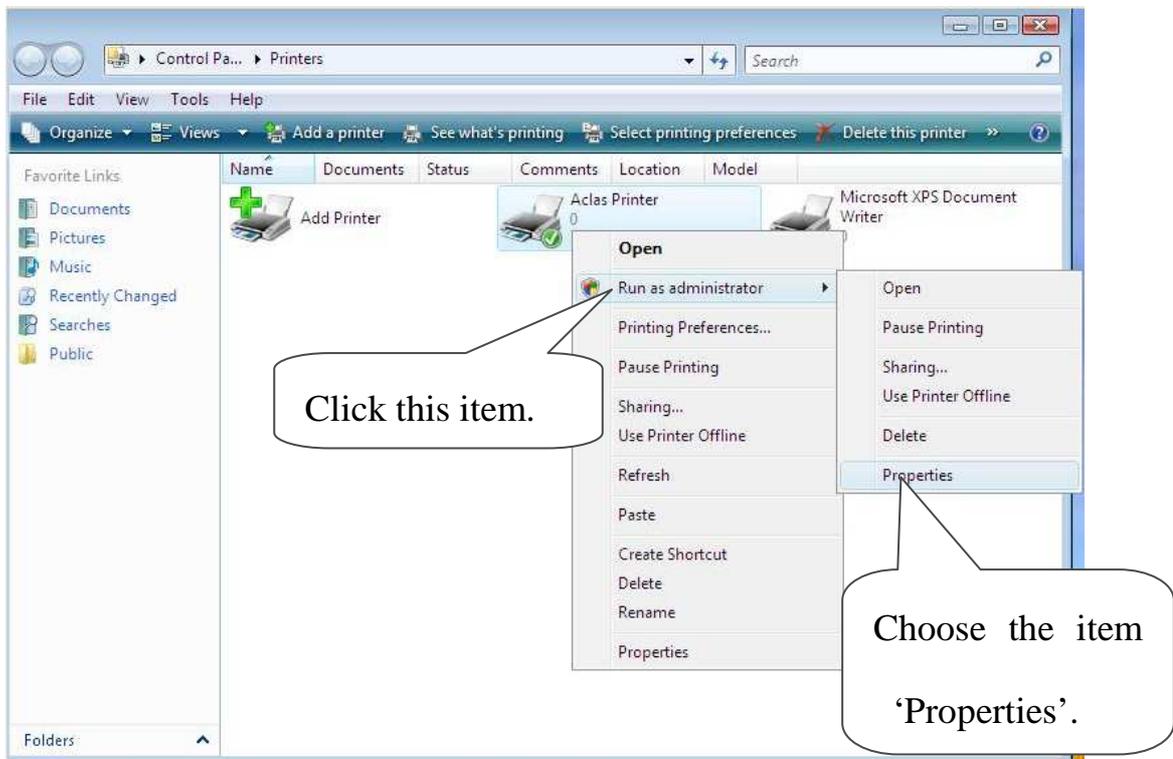


After entering 'properties' interface, you can configure port. The port configuration steps of PC with Windows XP system and PC with Vista system are the same. Take the port configuration steps of PC with Windows XP system for example:

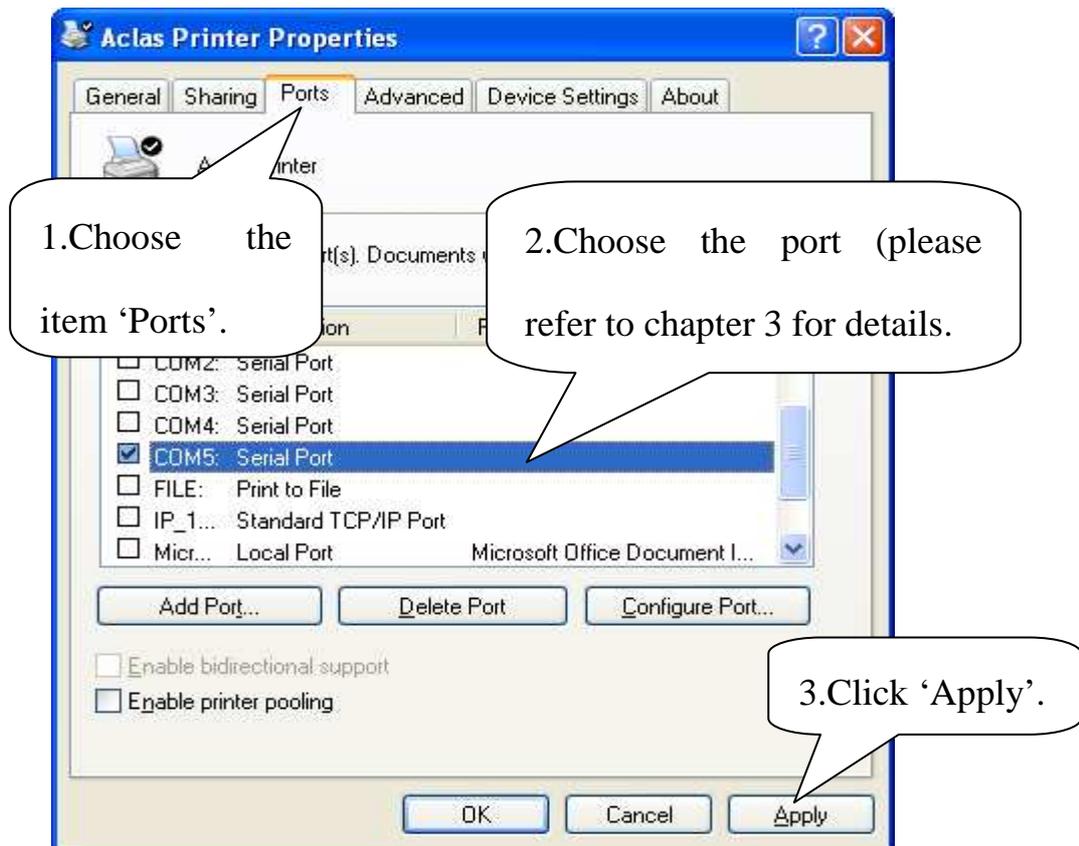

  Note: If you could find the connecting port that known in chapter 3, please restart your computer.




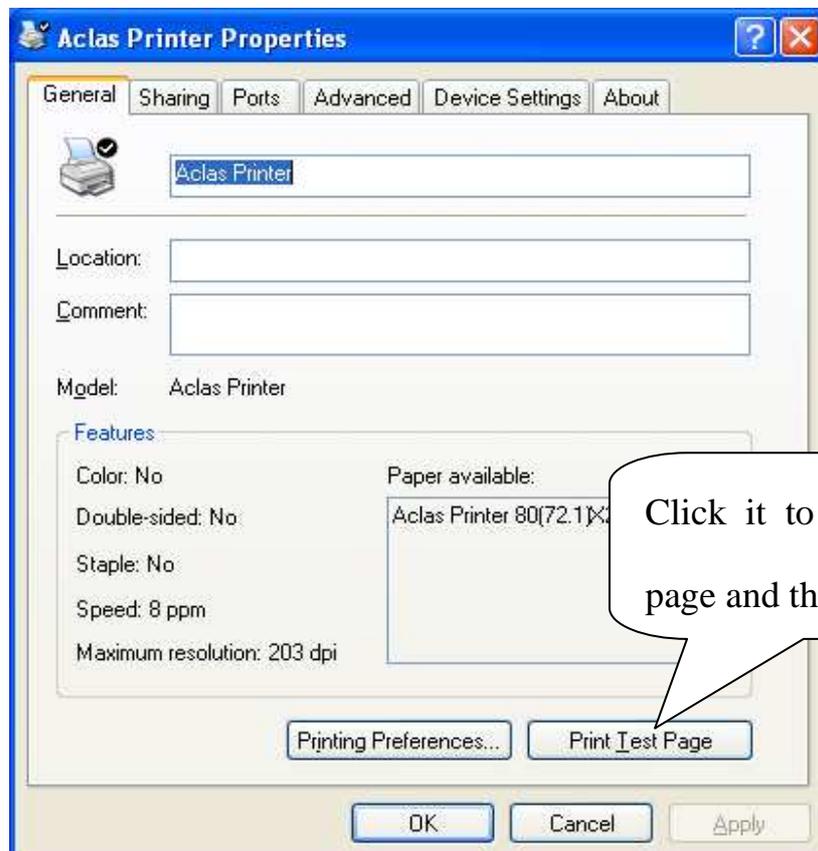

5 Parameter Setting

In the disk, you can find the software 'PP8_Enduser.exe' in the file 'PC-SW', double click to open it. Here, you can use the software to set printer parameter.

Note: please use the connection cable (9D4P) to download parameter via RS232 port.

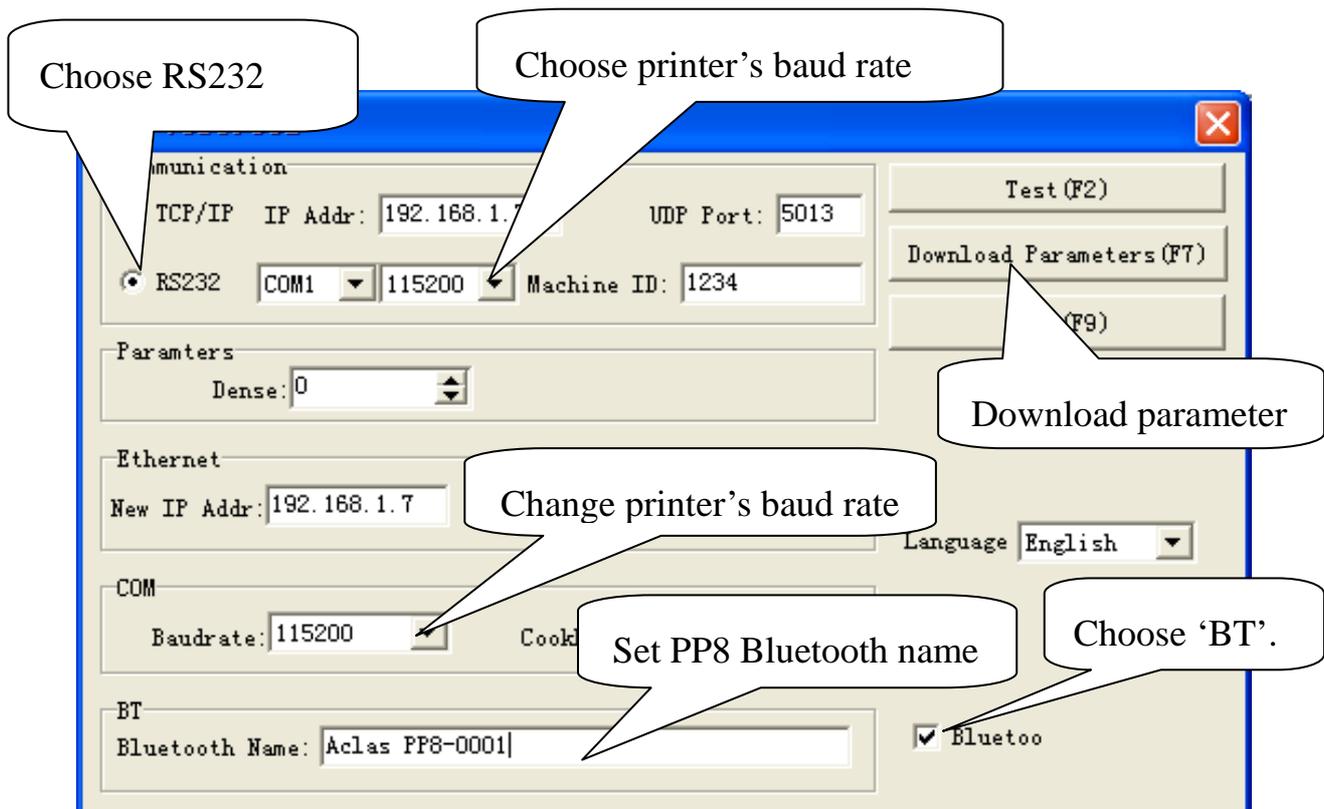

Note:

- ① The available baud rate for this printer is 9600, 19200, 38400, 115200.
- ② 'Download Parameter': After set the parameter, press 'F7' on the keyboard, and then choose the file in the Parameter file folder.

6 Download Logo

In the disk, you can find the software “PrintLogo.exe” in the file “Logo Download”, double click to open it. Here, you can use this software to download logo.

Notes:

Logo Index: this is to set the place of logo storing in the printer. There are 10 places for users to choose.

Print logo: Users could print the logo by click this button.

Clear logo: this is to clear all logos that have set in the printer.

Please use the connection cable (9D4P) to download logo via RS232 port.

