

GS1-128 Enable: Transmit GS1-128 labels in Code128 data format

Restore Custom Defaults

~3\$P,HA00,P<CR>



Enter Configuration

~3\$P<CR>



GS1-128 Enable: Transmit GS1-128 labels in Code128 data format

~3\$CU8EN00<CR>



ule 1,ule 2

~3\$U00000008554C4532000E0A0A,U0008000C0A0A7B0A7D0A0A0A040A0A0A<CR>



Exit Configuration

~3\$P<CR>

