
Auto Scan Mode

Enter/Exit Configuration Mode



* Normal Scan In Stand



Code Gate Inactive out of Stand



Blinky Scan – Laser turns on after the IR senses a bar code. The laser will blink on/off for approximately 60 seconds.

Enter/Exit Configuration Mode

