

Chapter 2 System Settings

Introduction

This chapter describes how to configure the basic system parameters on the scanner.

Restore Factory Defaults



Restore Factory Defaults

Operating Modes

The scanner provides two operating modes: Bluetooth mode and USB mode. To switch between these two modes, press the Scan/Power and Function buttons for 3 seconds at the same time or scan the **USB Mode** or **Bluetooth Mode** barcode.

Bluetooth Mode



Bluetooth Mode (default)

When the scanner is in the Bluetooth mode, you can select a desired profile by scanning the appropriate barcode below.



HID (default)