

Kontrol karakteri aktarmaz

*Enter Setup



W010F01

Kontrol karakteri aktarır

*Enter Setup



W010F01

Do Not Transmit UPC-A Check Digit



W086B00

*Transmit UPC-A Check Digit



W086B08

Exit Setup



W010F00

Exit Setup



W010F00