



All program setup must start with reading the "Start of Configuration" label, and read the "End of Configuration" label to save any changes.

---



The reading of the "RESET" label turns all the parameters back to default values.

---

\* The default parameter values are framed.

