



Start of Configuration

All program setup must start with reading the "Start of Configuration" label, and read the "End of Configuration" label to save any changes.

Interface Selection



PC/AT

* The default parameter values are framed



End of Configuration