



Enter/Exit Programming Mode

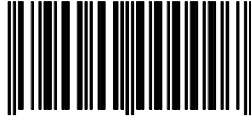

Return to USB default

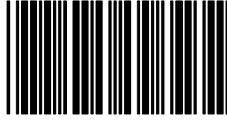

Enter/Exit Programming Mode

