

cradle yerleřtirildikten sonra aktarma



Start Of Configuration



Batch mode

Note: Scanner LED indicator will not flash while waiting for connection in this mode.



Send Batch data on
cradle

Data is ready to be transferred upon placement on the cradle. Press and hold the trigger for over 1 second to send the data.(Cradle radio connected is required)



End Of Configuration

Not: Okuyucuyu yuvaya (Cradle) yerleřtirildikten sonra okuyucu butonuna 1 saniye basılı tutuktan tutarak aktarma iřlemine bařlata bilirsiniz